


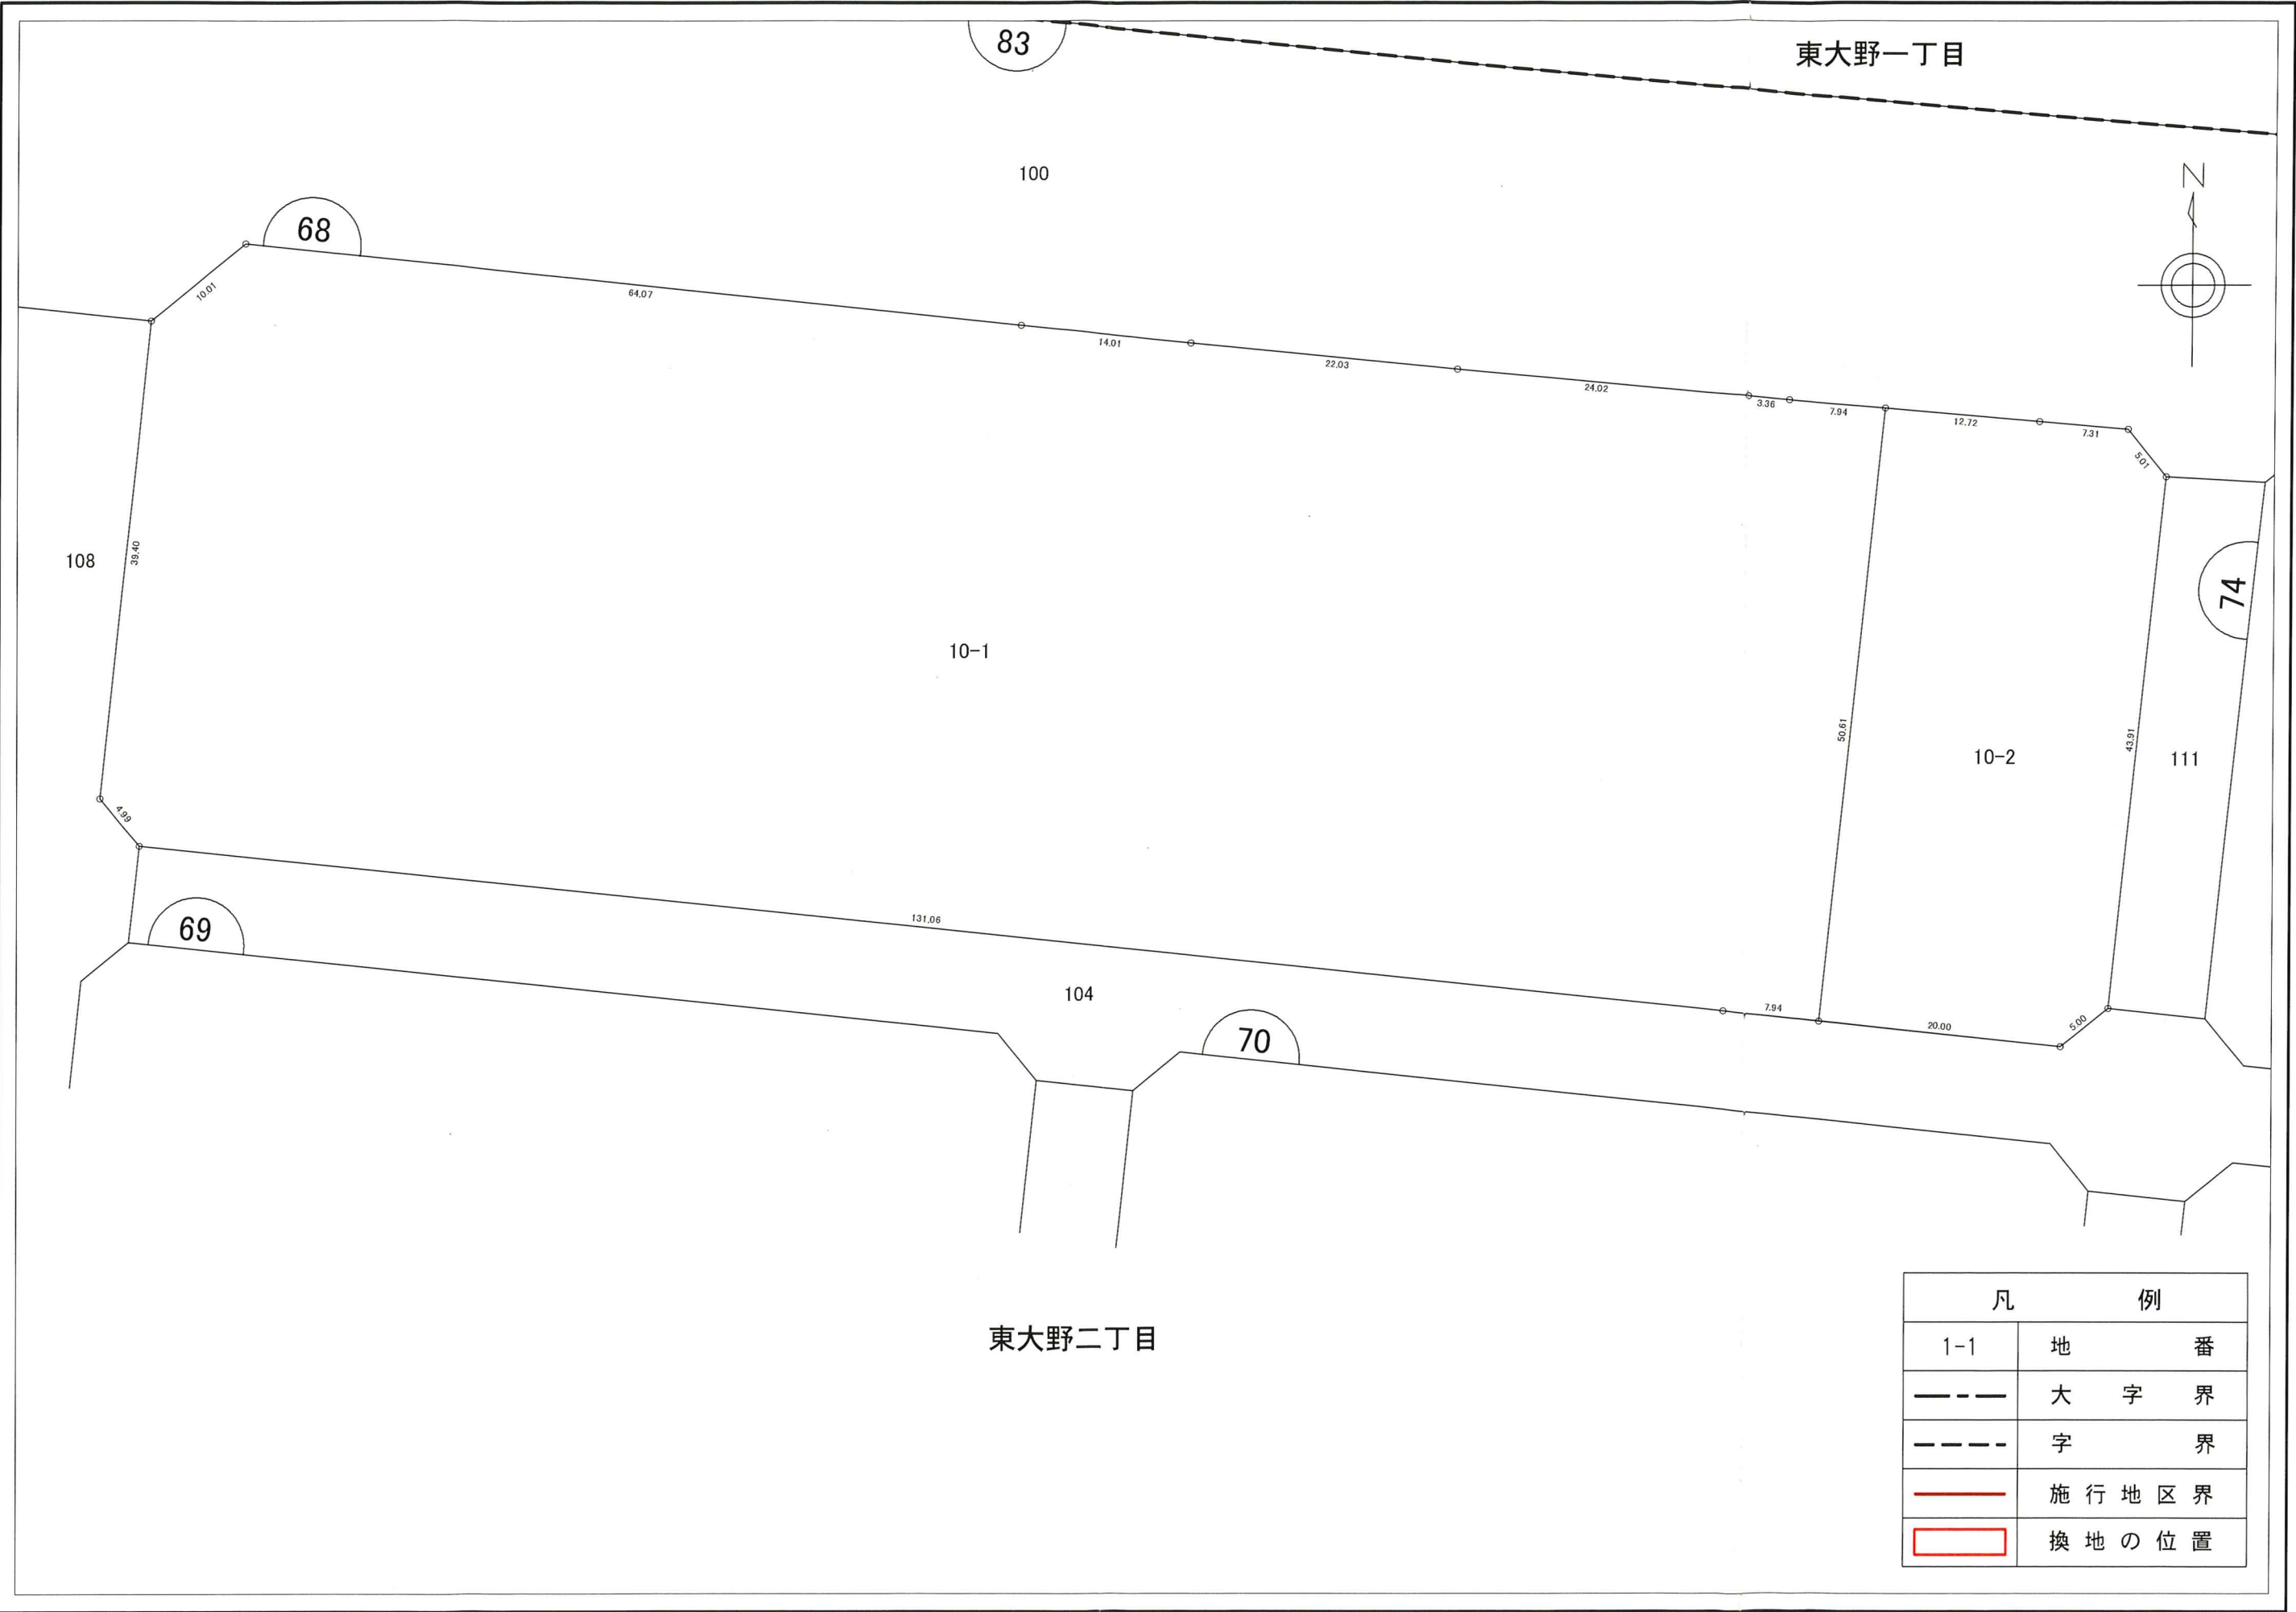

凡 例	
1-1	地 番
---	大 字 界
---	字 界
—	施 行 地 区 界
□	換 地 の 位 置

PAGE : 1

地番 = 68-1

测点名	夾角	方向角	距 離	[1]	[2]	[3]	[2]*[3]
				X(i)	Y(i)	X(i+1)-X(i-1)	
D68-1	135-10-22	231-08-37	10.016	88861.851	-7592.190	0.381	-2892.624390
D68-2	134-46-27	185-55-04	39.407	88855.567	-7599.990	-45.481	345655.145190
D68-3	135-07-55	141-02-59	4.992	88816.370	-7604.053	-43.079	327574.999187
D68-4	134-54-47	95-57-46	131.064	88812.488	-7600.915	-17.497	132993.209755
68-K1F	89-59-41	5-57-27	50.476	88798.873	-7470.560	36.588	-273332.849280
68-K2F	89-00-31	274-57-58	3.362	88849.076	-7465.321	50.494	-376953.918574
D68-10	180-22-16	275-20-14	24.028	88849.367	-7468.670	2.526	-18865.860420
D68-11	180-16-12	275-36-26	22.035	88851.602	-7492.594	4.388	-32877.502472
D68-12	180-15-14	275-51-40	14.013	88853.755	-7514.524	3.584	-26932.054016
D68-13	180-06-35	275-58-15	64.074	88855.186	-7528.464	8.096	-60950.444544
						倍面積	13418.100436
						面 積	6709.05
						坪 数	2029.48

PAGE : 2

地番 = 68-2

[illegible]